

Giga Vu Pro using WLAN under XP

Using WLAN-Router:

Settings GVP:

1. Select „device“ in the main menu. There you select „Settings WiFi cennction“.
2. Please give name and settings of your router, for example „home“
 - 2.a. SSID: put in „home“ (please use correct writing!).
 - 2.b. Mode: select „infrastructure“
 - 2.c. channel: select channel your router is using or „-“ for automatic channel search.
 - 2.d. WEP: Please select encryption of your router.
If your router does not support encryption, please select „off“.
(WPA-Encryption is not supported!)
 - 2.e. Key: Please put in your WEB-key, your router demands for connection or leave this space free, if no encryption is used.
 - 2.f. IP- Address mode: select „DHCP“ (most router select ip-address automatically). For manual use select „Static IP“.
 - 2.g. IP-Address: if selected „DHCP“, ip-address is automatically given to GVP (this takes a few seconds). If not, you are able to put in ip-address via touch screen.
3. Please store your settings. When GVP is connected to router, LED of WLAN-card is no longer blinking.

Settings for PC – Laptop:

1. Your PC or Laptop should already be connected to router and network.
2. Open your Windows explorer. At „network environment“ – „network area“ – „Microsoft Windows-Network“ the work group „Gigavu“ should be shown. There you can find „Samba 2.0.7 (Gigavu)“.
3. When you click on this icon, a password is requested. Please click „OK“ to continue.
4. Now you have fully access to „harddisk“ of GigaVuPro.

AD-Hoc connection (direct WLAN-connection between PC – Laptop and GVP):

Settings GVP:

4. Select „device“ in the main menu. There you select „Settings WiFi cennction“.
5. Please give following .
 - 2.a. SSID: geben Sie hier „GVP“ ein.
 - 2.b. Mode: select „adhoc“
 - 2.c. channel: select the channel your PC or Laptop is using or „-“ for automatic channel search.
 - 2.d. WEP: please select „off“.
 - 2.e. Key: please leave this space completely empty.
 - 2.f. IP- addressmode: select „static IP“.
 - 2.g. IP-address: put in „192.168.1.2“.
6. Please store your settings. When GVP is connected to the router, LED of WLAN-card is no longer blinking.

Settings at Laptop or Desktop using Windows XP:

1. Select START to „connect with“ -> „connection to WLAN “
2. Th dialog shows „status of WLAN connection“ click on properties.
3. „WLAN settings“ scroll and select „internet protocol (TCP/IP) click on properties.
4. Dialog shows „Properties of Internet protocol (TCP/IP)“ select „Select following IP-Address:“ and put in „IP-Address:“ 192.168.1.1 and at „subnetmask:“ 255.255.255.0 and click „OK“ to continue.
5. Dialog shows „Status of WLAN connection“ select „WLAN“ and click on „add“.
6. Put in „SSID“ on GVP. Please let authentication at „open“. Please deactivate „file encryption“.
7. Check if „This is a Computer-to-Computer-Network (ad-hoc).....“ is activated and click on OK.
8. Select right mouse click at „network area“ and select „Computer search“. Put in „Gigavu“ in the search mask. After searching the GVP is shown as „Samba 2.0.7 (Gigavu)“.